

# Solid State Relay – SSR

# SSR 10 / 25 / 40 / 60 / 40 / 100 A - INSTRUCTIONS MANUAL - V1.0x C

## **FEATURES**

The Solid State Relays (SSR) are electronic devices used for switching resistive or inductive AC loads with many advantages over the conventional relays.

Increased lifetime, due to the fact that there are no moving parts, and thus, no mechanical wear. Zero cross switching, which implies lower electrical noise. Silent operation. Control INPUT signal optically isolated from the OUTPUT. Internal snubber provided.

### **OPERATION**

A control voltage applied to the device input turns the ssr on, energizing the load. The conduction effectively occurs at the next zero crossing of the mains voltage. When the input signal is removed, the ssr turns off when the load reaches a current equal to zero. This means that the load switching may be delayed by 1/2 of mains period (or 8.3 ms for the 60 hz mains).

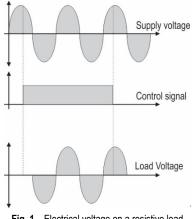



Fig. 1 - Electrical voltage on a resistive load

Turning the output ON and OFF only on the mains voltage zero crossing brings important performance advantages to the system: practically no EMI is generated during the load switching and the SSR is submitted to less severe switching conditions. On the other hand, the SSR is suitable to AC loads only (it cannot be used to switch DC loads).

The SSR control signal is indicated by a LED on the SSR body.

## **ELECTRICAL CONNECTIONS**

 The two connections needed for the installation of the SSR are the command signal and the load circuit. The load circuit must be protected by an ultra-fast fuse with a rate that matches the SSR nominal current specification. The SSR terminals must be firmly screwed and the wire gauge compatible with the output load.





## **HEAT DISSIPATION**

The SSR generates heat during its conduction. This heat must be dissipated to avoid SSR fail due to over-heat. The nominal SSR load specification assumes the use of a suitable heat sink. Without a heat sink the allowed load current is substantially reduced. The user may calculate the needed heat sink or make use of a heat sink suggested by NOVUS.

		Where:			
R <sub>thha</sub> =	75°C - T <sub>amb</sub> IL x V <sub>ssr</sub>	R thha = Thermal resistance heat sink to ambient			
		T amb = Maximum ambient temperature			
		IL = Load current			
		V ssr = Voltage drop when the SSR is ON.			
		75°C is the maximum temperature allowed for the			

For better heat transfer, a thermal conducting paste must be used between the SSR and the heat sink. The SSR along with its heat sink must be mounted in a vertical position such as to allow for air flow and thus a good heat exchange.

#### Notes:

1. The use of the Thermal Pad that comes with the SSR is optional. In installations where a heat sink is provided for the cooling function, you do not need to use the Thermal Pad. In installations where the surface that will receive the SSR is not perfectly flat, its use may improve the cooling of the SSR.

2. Make sure that the screws on the SSR terminals are properly tightened. Contact problems at these points influence the proper operation of the entire installation power system.

3. Before continuous use, always perform installation validation tests.

The graphs below show the current carrying capacity of the SSR as a function of ambient temperature when mounted on the indicated heatsink and whether or not the fan is used.

ΙL

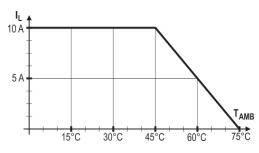


Fig. 3 – SSR2510/4810 + sink ND10-65 mm

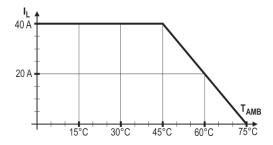


Fig. 5 - SSR2540/4840 + sink ND40-100 mm

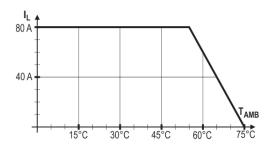


Fig. 7 - SSR4880 + sink NDP3-120 mm + fun 3 m/s

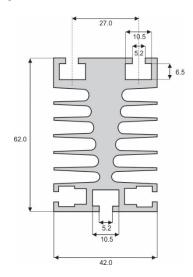


Fig. 9 - Sink ND10 (to 65mm: R thha = 2.0 °C / W)

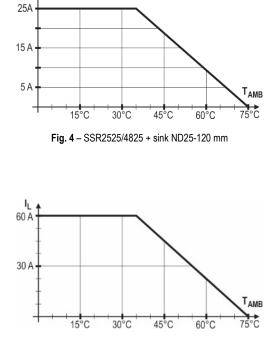


Fig. 6 - SSR4860 + sink NDP3-120 mm

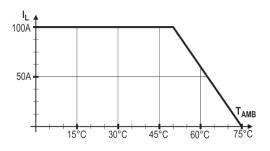


Fig. 8 - SSR48100 + sink NDP3-120 mm + fun 3 m/s

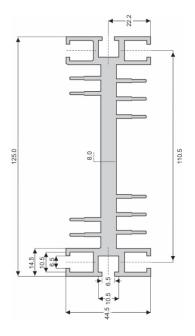


Fig. 10 - Sink ND25 (to 120 mm: R thha = 1.1 °C / W)

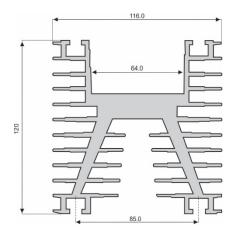


Fig. 11 - Sink ND40 (to 100 mm: R thha = 0.65  $^\circ\text{C}$  / W)

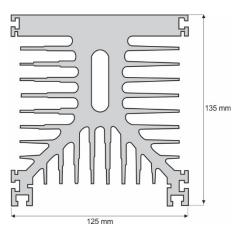


Fig. 12 - Sink NDP3 (to 120 mm: R thha = 0.52 °C / W)

## **SPECIFICATIONS**

	Model								
Parameter	Unit	SSR 2510 SSR 4810	SSR 2525 SSR 4825	SSR 2540 SSR 4840	SSR 4860	SSR 4880	SSR 48100		
Load current (IL)	A rms	10	25	40	60	80	100		
Load voltage	V rms	50 to 250 (25XX) / 75 to 480 (48XX)			40 to 480				
Turn-on voltage (Vssr) V rms		1.1 to 1.5			1.6 to 1.8				
Leakage current	mA rms	mA rms < 5 (25XX) / < 14 (48XX)			<5				
Frequency		47 to 70			47 to 63				
Dv/dt	V/µs	50 to 200			300				
Control voltage	Vcc	4 to 32			3 to 32				
Control current	mAcc	5 to 12			6 to 25				
Switching time	ms	<10			<10				
Control method		Zero cross trigger			Zero cross trigger				
Isolation	V rms	4000			2000				
Operating temperature	°C	-30 to 80			-40 to 80				

Table 1 - Specifications

## DIMENSIONS



## WARRANTY

The warranty conditions are set forth on our website www.novusautomation.com/warranty.